

how to replace a controller without white wire ?

The white wire controls the inlet valve.



old controller:



standard controller:

From:

<https://diasys-technologies.com/waterpurifiers/> - **DiaSys Water Purifier Systems**

Permanent link:

[https://diasys-technologies.com/waterpurifiers/doku.php?id=replace\\_controllerwithoutwhitewire&rev=1552664416](https://diasys-technologies.com/waterpurifiers/doku.php?id=replace_controllerwithoutwhitewire&rev=1552664416) 

Last update: **2019/03/15 15:40**